

MERTARVIK (EWU)(PAEW) 1 W UTC-9(-8DT) N60°48.62' W164°29.97'

345 B NOTAM FILE ENA

RWY 12-30: 3300X75 (GRVL) MIRL 0.3% up NW

SERVICE: LGT ACTVT rotg bcn—CTAF. ACTVT MIRL Rwy 12-30—CTAF.

AIRPORT REMARKS: Unattended. Rwy cond unmt; rcmd visual insp prior to use.

AIRPORT MANAGER: 907-543-2498

COMMUNICATIONS: CTAF 122.9

RADIO AIDS TO NAVIGATION: NOTAM FILE HPB.

HOOPER BAY (H) (H) VOR/DME 115.2 HPB Chan 99 N61°30.86' W166°08.07' 118° 63.7 NM to fld. 15/13E.


VOR unusable:

358°-013° byd 22 NM blo 3,500'

DME unusable:

358°-013° byd 22 NM blo 3,500'

COMM/NAV/WEATHER REMARKS: For a toll free call to Kenai FSS dial 1-866-864-1737.

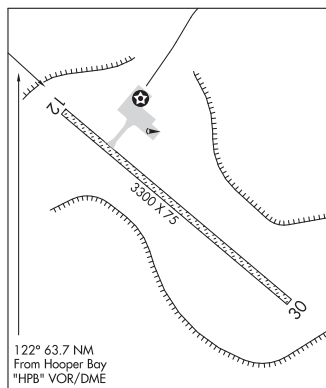

BETHEL
L-3B

METLAKATLA SPB (MTM)(PAMM) 0 N UTC-9(-8DT) N55°07.85' W131°34.46'

00 NOTAM FILE MTM

WATERWAY E-W: 5000X5000 (WATER)

WATERWAY N-S: 5000X5000 (WATER)

SEAPLANE REMARKS: Unattended. Boats tied to SPB float. Unfavorable apch to float due to prevailing wind creating swells.

AIRPORT MANAGER: (907) 465-4512

WEATHER DATA SOURCES: AWOS-3P 135.55 (907) 560-7608. (WX CAM)

COMMUNICATIONS: CTAF 122.9

RADIO AIDS TO NAVIGATION: NOTAM FILE ANN.

ANNETTE ISLAND (H) (H) VOR/DME 117.1 ANN Chan 118

N55°03.62' W131°34.70' 341° 4.2 NM to fld. 184/21E.

VOR unusable:

000°-100° byd 11 NM blo 12,000'

000°-100° byd 15 NM

000°-100° byd 9 NM blo 6,500'

120°-130° byd 37 NM blo 6,000'

290°-320° byd 32 NM blo 7,000'

290°-320° byd 37 NM blo 9,000'

345°-000° byd 20 NM

DME unusable:

000°-100° byd 11 NM blo 12,000'

000°-100° byd 15 NM

000°-100° byd 9 NM blo 6,500'


120°-130° byd 37 NM blo 6,000'

290°-320° byd 32 NM blo 7,000'

290°-320° byd 37 NM blo 9,000'

345°-000° byd 20 NM

COMM/NAV/WEATHER REMARKS: LC to Ketchikan FSS dial 225-9481. For a LC to Juneau FSS dial 789-7380.

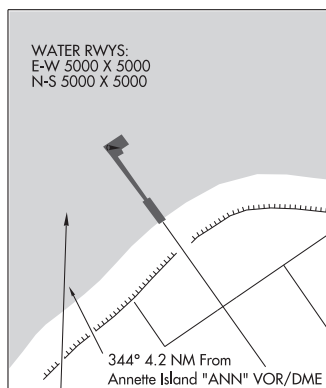

KETCHIKAN

METRO FLD (See FAIRBANKS on page 105)